



Legacy YardMaster Interconnects

How to connect older YardMaster units to a StationMaster-5

Notice that the 6 pin switching terminals 15 thru 20 are the same for all versions.

To connect these versions to a StationMaster-5 cut one end of a interconnect cable and expose the wires.


Connection to non-pushbutton Yardmaster & Yardmaster XP

Pin 3 is the outside black wire

Pin 4 is the center wire

Pin 11 is the outside red wire

Pins 1 & 2 are the switching contacts

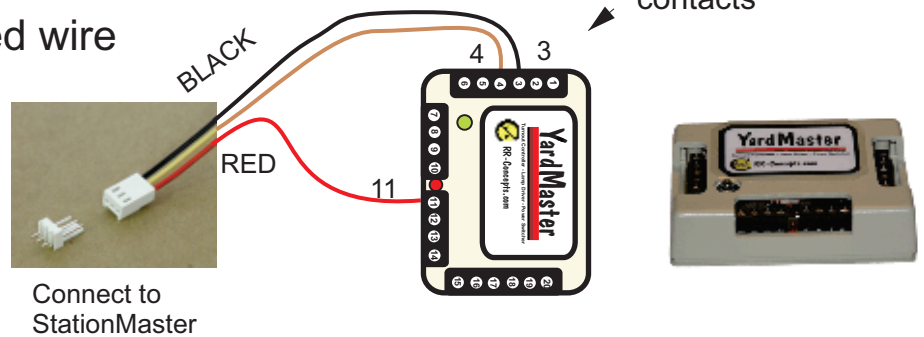


Connection to pushbutton Yardmaster-P

Pin 2 is the outside black wire

Pin 1 is the center wire

Pin 11 is the outside red wire

Pins 3 & 4 are the switching contacts

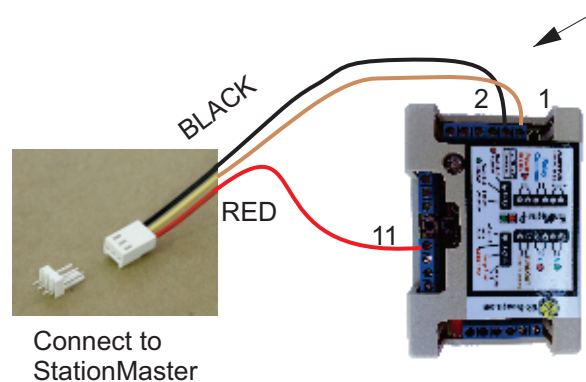

Both of these versions contain a single driver chip which throws the turnout and controls the relay. If the relays do not operate it may be possible to replace the driver chip which is in a socket.